


**US Army Corps
of Engineers®**
Engineer Research and
Development Center

Technology Demonstration of Self-Healing Coatings for In-Place Management of Lead- Based Paint Hazards

L. D. Stephenson and Ashok Kumar

December 2003

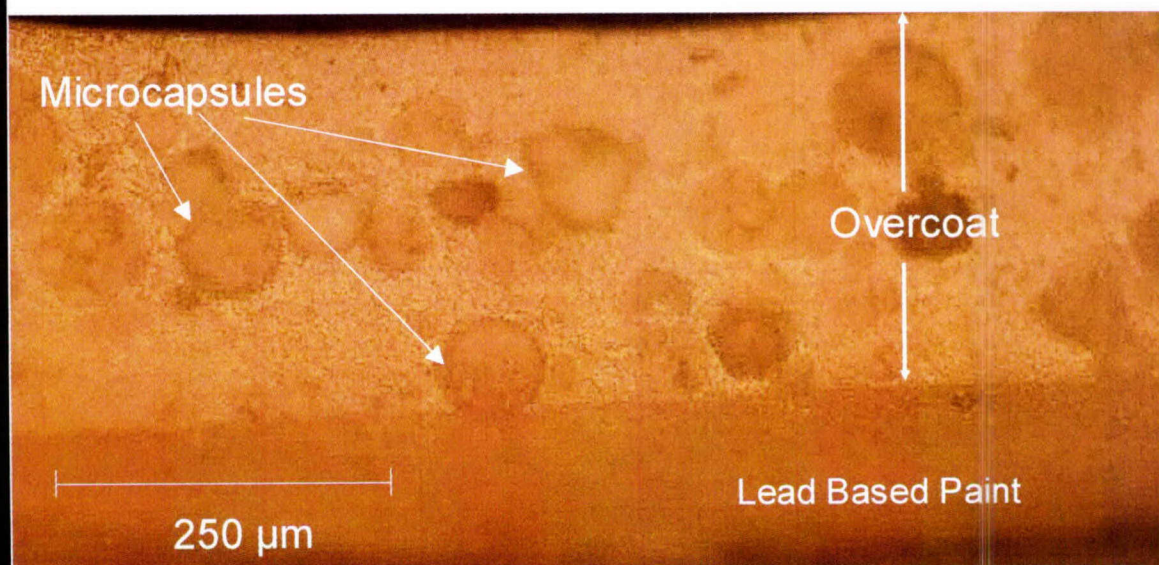

Technology Demonstration of Self-Healing Coatings for In-Place Management of Lead-Based Paint Hazards

L. D. Stephenson and Ashok Kumar

*Construction Engineering Research Laboratory
PO Box 9005
Champaign, IL 61826-9005*

Final Report

Approved for public release; distribution is unlimited.

Prepared for

Headquarters, Department of the Army
Washington, DC 20310-0600

Under

Work Unit CF-M B101

ABSTRACT: Microscopic capsules have been developed on the order of 50 – 150 microns in size. These microcapsules can contain a small quantity of liquid, and they will release their contents when broken. Microcapsules containing paint repair and lead dust suppression compounds can be mixed into commercially available latex coatings and used to overcoat existing lead-based paint (LBP) on older buildings. If such an overcoating is damaged, the microcapsules break open and release their self-repair compounds to forestall overcoat degradation and inhibit hazardous quantities of lead entering the environment.

The U.S. Army Engineer Research and Development Center, Construction Engineering Research Laboratory (ERDC/CERL) tested 'self-healing' coatings in the laboratory and demonstrated them on an aged wood building at the former Fort Ord, CA. In both the laboratory and field demonstration, when the self-healing coatings were applied over lead-based paint, intentionally damaged, and wipe-tested, significant reductions in lead dust were realized compared with the results of the same test procedure applied to LBP overcoated with standard latex paint.

DISCLAIMER: The contents of this report are not to be used for advertising, publication, or promotional purposes. Citation of trade names does not constitute an official endorsement or approval of the use of such commercial products. All product names and trademarks cited are the property of their respective owners. The findings of this report are not to be construed as an official Department of the Army position unless so designated by other authorized documents.

DESTROY THIS REPORT WHEN NO LONGER NEEDED. DO NOT RETURN IT TO THE ORIGINATOR.

Contents

List of Figures and Tables	v
Conversion Factors	vii
Preface	viii
Executive Summary	ix
1 Introduction.....	1
Background	1
Objective	1
Approach	1
Mode of Technology Transfer	2
2 Technology Description.....	3
Technology Development and Application	3
Laboratory Testing	3
Results of Laboratory Testing	8
Conclusions from Laboratory Testing	14
Advantages and Limitations of the Technology	14
3 Demonstration Design	15
Performance Objectives	15
Selection of Test Site/Facility	15
Test Facility History/Characteristics	15
Physical Setup and Operation	17
Sampling/Monitoring Procedures	21
Analytical Procedures	22
4 Performance Assessment	23
Performance Data	23
Performance Criteria	24
Data Assessment	24
Technology Comparison	25
5 Cost Performance Assessment.....	26
Cost of Self-Healing Overcoatings	26
Cost Analysis	27
Cost Comparison	28
6 Summary	29

Implementation Costs	29
Performance Observations	29
References	31
Points of Contact.....	33
Acronyms	34
Report Documentation Page.....	35

List of Figures and Tables

Figures

1. Layer technique used in applying microcapsules.....	5
2. Optical micrograph of microcapsules within the self-healing overcoating for the LBP.	5
3. Release of red dye from ruptured microcapsules illustrating self-healing mechanism.	6
4. Cutting diagram for Lead Check® screening.	7
5. Comparison of Lead Check® screening on overcoatings with and without microcapsules.....	7
6. Cutting diagram for visual and ASTM E 1728 lead wipe testing.	8
7. ASTM E1728 lead dust wipe results from Set 1: microcapsules applied with Baker Film Applicator.	12
8. ASTM E1728 lead dust wipe results from Set 2: microcapsules applied with Baker Film Applicator.	12
9. ASTM E1728 lead dust wipe test results with various microcapsules applied using a brush, including control coatings (without microcapsules).	13
10. ASTM E1728 results with microcapsules applied using a brush with expanded scale to show comparison of various microcapsule-laden coatings.....	13
11. Preexisting condition of painted exterior wood siding.....	16
12. Crosscut adhesion testing of old exterior paint.	16
13. Verification of lead in old exterior paint.....	17
14. Cleaned exterior wood siding ready for painting.	18
15. Polybutene and calcium hydroxide microcapsules.....	19
16. Exterior application of self-healing coating.....	20
17. Interior application of self-healing coatings.	20
18. Scribed test area for wipe testing of self-healing coating.....	22

Tables

1. ASTM E1728 results from Set 1 — Ca(OH) microcapsules applied with drawdown device (Baker Film Applicator).....	10
2. ASTM E1728 results from Set 2 — Ca(OH) microcapsules applied with drawdown device (Baker Film Applicator).....	10
3. ASTM E1728 results from Ca(OH) microcapsules applied with brush.....	10
4. ASTM E 1728 results from polybutene microcapsules applied with brush.....	11

5. ASTM E 1728 results from Set 1 — 50/50 combination of Ca(OH) and polybutene using a drawdown device (Baker Film Applicator).....	11
6. ASTM E 1728 results from Set 2 — 50/50 combination of Ca(OH) and polybutene using a drawdown device (Baker Film Applicator).....	11
7. ASTM E1728 results from 50/50 combination of Ca(OH) and polybutene applied with brush.	13
8. Performance objectives.	15
9. Lead in existing coatings.	17
10. Interior/exterior self-healing paints.	18
11. Description of acrylic latex coating.	21
12. Description of self-healing technology.	21
13. Short-term performance data.	23
14. Performance criteria.	24
15. Costs for applying self-healing coatings (per 1,000 sq ft.)	26
16. Costs for applying latex paint (per 1,000 sq ft.)	27

Conversion Factors

U.S. standard units of measure can be converted to SI* units as follows:

Multiply	By	To Obtain
acres	4,046.873	square meters
cubic feet	0.02831685	cubic meters
cubic inches	0.00001638706	cubic meters
degrees (angle)	0.01745329	radians
degrees Fahrenheit	$(5/9) \times (^\circ\text{F} - 32)$	degrees Celsius
degrees Fahrenheit	$(5/9) \times (^\circ\text{F} - 32) + 273.15$	kelvins
feet	0.3048	meters
gallons (U.S. liquid)	0.003785412	cubic meters
horsepower (550 ft-lb force per second)	745.6999	watts
inches	0.0254	meters
kips per square foot	47.88026	kilopascals
kips per square inch	6.894757	megapascals
miles (U.S. statute)	1.609347	kilometers
pounds (force)	4.448222	newtons
pounds (force) per square inch	0.006894757	megapascals
pounds (mass)	0.4535924	kilograms
square feet	0.09290304	square meters
square miles	2,589,998	square meters
tons (force)	8,896.443	newtons
tons (2,000 pounds, mass)	907.1847	kilograms
yards	0.9144	meters

* SI: *Système International d'Unités* (International System of Measurement).

cm areas. The overcoatings with the self-healing microcapsules were compared with the controls, plain latex paint overcoatings (i.e., coatings without self-healing microcapsules), which were also painted over 50 sq ft of existing LBP on both the interior and exterior of the building.

The average wipe test lead level for interior surfaces coated with self-healing coating was 45 $\mu\text{g}/\text{ft}^2$ lead, or the same as the method detection limit. Tests on interior control surfaces were only slightly higher with an average of 60 $\mu\text{g}/\text{ft}^2$ lead. The tests on interior surfaces show a 25 percent reduction in lead dust.

The average wipe test lead level for exterior surfaces coated with self-healing coating was 140 $\mu\text{g}/\text{ft}^2$ lead. Tests on exterior control surfaces were significantly higher with an average of 1,300 $\mu\text{g}/\text{ft}^2$ lead. The tests on exterior surfaces demonstrate the short-term efficacy of the self-healing coating, i.e., an 89 percent reduction in lead dust.

The unit area cost of self-healing coatings was shown to be \$3.71/sq ft, and the unit area cost of plain latex coatings was \$3.48/sq ft. Although the addition of the microcapsules results in an increase of 6.2 percent to the cost of overcoating, the self-healing overcoatings showed a 95 percent reduction in lead dust over the controls in the laboratory. In the field demonstration, they resulted in 25 percent to 89 percent reduction in lead dust performance, with a mean lead reduction of 60 percent. On the basis of lead dust reduction, the service life of the coating is extended by 60 percent.

The generally accepted maximum life of plain latex paint overcoatings is 10 years on exterior surfaces, due to degradation via the ultraviolet light (UV) component of sunlight. On interior coatings, the maximum service life is only 4 years, due to wear and tear by young children. Thus, the use of self-healing coatings has been projected to extend the coating lives 11.2 to 16 years for exterior coatings and 2.4 years for interior coatings, when used in child-accessible areas. For plain latex overcoatings, the unit area costs per year of coating life range from \$0.34/sq ft/year to \$0.50/sq ft/year for exterior coatings and \$0.87/sq ft/year for interior coatings. For self-healing overcoatings, the potential unit area costs per year range from \$0.23/sq ft/year to \$0.33/sq ft/year for exterior coatings, and \$0.58/sq ft/year for interior coatings in child-accessible areas. In either case, the cost benefit from using self-healing coatings for both exterior and interior surfaces, is projected to be 33 percent over the 11.2 to 16 years for exterior coatings, or over 6.4 years for interior coatings in child-accessible areas, compared with plain latex overcoatings. Self-healing coatings should be used only for overcoating LBP on exterior surfaces or interior surfaces in high wear-and-tear areas.

1 Introduction

Background

This report addresses the environmental problem of control of lead-based paint (LBP) hazards on buildings. Deteriorated LBP poses a serious health risk to building occupants, particularly children. Abatement is intended to eliminate the health risk associated with LBP. Abatement methods include encasement of the substrate, removal, and overcoating with approved encapsulating coatings. Removal includes removal of the lead-painted substrate or removal of just the LBP itself. However, paint removal methods are generally reserved for limited areas and for surfaces where historic preservation requirements may apply. Paint removal techniques demand high levels of control and worker protection, and also may generate significant amounts of hazardous waste.

The expected benefit of this technology is the cost-effective abatement of LBP on building surfaces. The material and process described herein represent a potential new technology for LBP abatement. The demonstration was performed on interior wood columns and windows and exterior wood siding at the former Fort Ord, Marina, CA.

Objective

The purpose of the demonstration was to evaluate the cost and performance of self-healing coatings to control lead hazards on wooden building surfaces.

Approach

Laboratory experiments were performed to optimize the efficacy of microcapsule additives containing liquid film formers to commercially available latex paint to produce self-healing coatings. A wooden building with existing LBP at the former Fort Ord, CA, was chosen for the evaluation of the performance of self-healing overcoatings compared with plain latex paint overcoatings. A field adhesion test (American Society for Testing and Materials [ASTM] D3359) (ASTM 2002B) was performed to

verify that the existing LBP coatings were suitable for overcoating. Microcapsules containing film-formers and lead dust suppression compounds were mixed into latex paint. The resulting mixture was brush-applied over LBP onto 50 sq ft* of an interior wooden surface and 50 sq ft of exterior wooden surface both with existing LBP. When the dried self-healing coatings were cut, the microcapsules released the lead dust suppression and coating repair compounds into the cut areas. The efficacy of the self-healing overcoating was evaluated by the ASTM E1728 wipe test (ASTM 2002a) after a series of cuts had been made in several 100 sq. cm areas. The overcoatings with the self-healing microcapsules were compared with the controls, plain latex paint overcoatings (i.e., coatings without self-healing microcapsules), which were also painted over 50 sq ft of existing LBP on both the interior and exterior of the building.

Mode of Technology Transfer

Technology transfer is being accomplished by: (1) a Technology Transfer Implementation Plan supervised by the U. S. Army Environmental Center (AEC); (2) dissemination of Public Works Technical Bulletin (PWTB) 420-70-2, "Installation Lead Hazard Management"; (3) participation in User Groups and Committees such as the Army Lead and Asbestos Hazard Management Team, Federal Lead-Based Paint committee meetings at the Environmental Protection Agency (EPA) or U.S. Department of Housing and Urban Development (HUD), and ASTM Committee E06.23 on Lead Hazards Associated with Buildings; and (4) websites maintained by the Office of the Assistant Chief of Staff for Installation Management (ACSIM) [<http://www.hqda.army.mil/acsimweb/fd/policy/facengcur.htm>], AEC [<http://aec.army.mil/usaec/>], and the U. S. Army Engineer Research and Development Center, Construction Engineering Research Laboratory (ERDC/CERL) [<http://www.cecr.army.mil>], as well as the Hands-on-Skills Training (HOST) website [<http://www.hqda.army.mil/acsimweb/fd/policy/host/index.htm>].

* A table of factors for converting non-SI units of measurement to SI units is found on page vii.

2 Technology Description

Technology Development and Application

The intended use of self-healing coatings as evaluated herein is the abatement of interior and exterior lead-coated architectural surfaces. The technology is applicable to the abatement of all types of architectural coatings including alkyd and latex types. The target contaminants are lead compounds used in architectural coatings as hiding and coloring pigments and as agents to promote drying of certain types of coatings. Self-healing coatings are latex coatings containing microencapsulated liquid healants applied over existing LBP. The self-healing coatings work by overcoating the lead-containing paint. If the coating cracks or is scratched or impacted, the microcapsules will rupture and release the liquid healants. The liquid flows into the damaged area and forms a solid material (calcium carbonate) that seals the damaged area. The self-healing mechanism ensures the continued containment of hazardous lead even when the overcoat sustains damage. The self-healing mechanism may also prolong the useful life of the coating.

Laboratory Testing

The use of overcoatings is one possible abatement method for controlling the exposure to lead from LBP. The object of the laboratory experiments was to determine the effectiveness of different types of microcapsules used to make self-healing coatings. This entailed providing observations and numerical results for the amount of lead dust exposed when an overcoating with microcapsules is breached.

All of the microcapsules were tested in the same manner. They were mixed with latex paint and applied at a thickness of 8 mils over a coat of 4-mil-thick LBP. All of the samples were then covered with an 8-mil-thick layer of plain latex overcoating. After the overcoat was allowed to dry, the samples were scribed with a razor blade. When cut or scratched, the paint coating layer, along with some of the microcapsules, was broken. The rupture of the microcapsules should have been sufficient to release their payloads; core material was then free to flow into the grooves created by the cut. The contents of the microcapsules should have then formed a protective barrier, which would not have allowed any lead dust through. The dried plates

were then tested three ways: (1) visually, (2) with the use of a LeadCheck® swab (Hybrivet Systems, Natick, MA) and (3) wiped for lead dust concentration levels using ASTM E1728-95 "Standard Practice for Field Collection of Settled Dust Samples using Wipe Sampling Methods for Lead Determination by Atomic Spectrometry Techniques," (ASTM 2002a).

Laboratory test samples were made by painting a 7- by 2.5- by 0.2-in. wood slab. The wood was coated with a 6-mil wet layer of LBP (72 percent lead carbonate, 20 percent linseed oils, and 7 percent lead/cobalt drier). This layer was applied using an adjustable Baker Film Applicator (Elcometer, Manchester, England) with an area of 3- by 2.5-in. The LBP layer dried to about 4 mils. After the wooden sample was coated with LBP, an overcoating layer was applied. This layer was applied at 8 mils, wet, using the Baker film applicator.

For all control samples, this layer was composed of plain latex paint. The paint used in all experiments was Four Seasons Trim Enamel Gloss Acrylic Latex (White 024-1791, MAB Paints, Broomall, PA 19008). This particular paint has a 58/100 solid-to-solvent ratio. Previous data showed that a 30/70 dry weight ratio of microcapsules to paint provided the most protection. Therefore, the dry capsules were mixed with the paint at a weight percentage ratio of 20 percent capsules to 80 percent paint.

The microcapsules were hand mixed with the paint by gently stirring with a spoon. Four types of microcapsules were tested. To test the microcapsules, a number of experiments were performed. The microcapsules used were all 63-150 microns in diameter and with a urea formaldehyde shell. The core ingredients differed in each type. 3M Technologies supplied one of the microcapsules types with tung oil as the core constituent. Thies Technologies supplied the other three microcapsules with core ingredients of Ca(OH), polybutene/sanitizer, and spar varnish/tung oil, respectively. The microcapsule layer was allowed to dry for 24 hours before a final coat of 8-mil-thick, plain latex paint was added. This overcoat was applied on both the control samples and the microcapsule samples. This process was repeated for each set of data. Each time, 3-9 samples were made of each microcapsule type, and 3-9 were used as controls. The samples were then compared against each other to determine the total effect of the microcapsules. Figure 1 is a schematic illustrating the various layers of paint on the samples. An optical micrograph showing a transverse section of one of the self-healing coatings over LBP is shown in Figure 2.

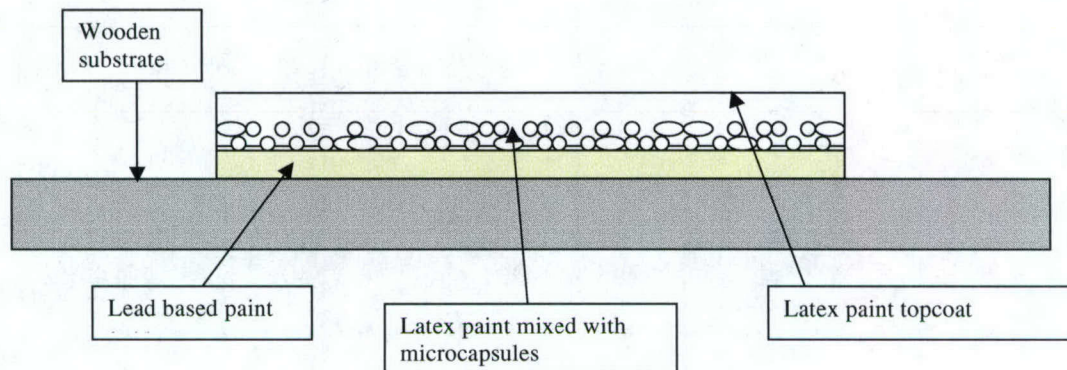


Figure 1. Layer technique used in applying microcapsules.


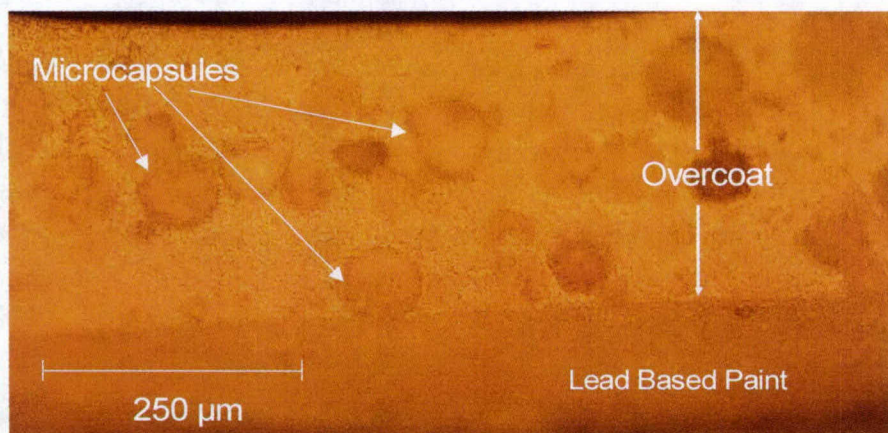


Figure 2. Optical micrograph of microcapsules within the self-healing overcoating for the LBP.

The efficacy of release mechanisms for core constituents of the microcapsules were studied in the laboratory, and examples are shown in Figures 3a and 3b. Figure 3a shows the results of one of the microcapsule release studies in which microcapsules containing red dye were incorporated into a latex paint coating applied to a piece of rubber that was subsequently twisted, resulting in the formation of a crack in the coating. The formation of the crack ruptured one of the microcapsules and caused the red dye to flow. A second mechanism of microcapsule core constituent release is illustrated in Figure 3b. The red dye microcapsules were incorporated into a latex coating applied to a wooden substrate. The dried coating was then cut with a razor blade, which also broke open the microcapsules and resulted in the flow of red dye into the damaged area. "Self-healing" materials that restore the integrity of the original paint film will also flow into cracked, scratched, or cut areas via these same mechanisms.

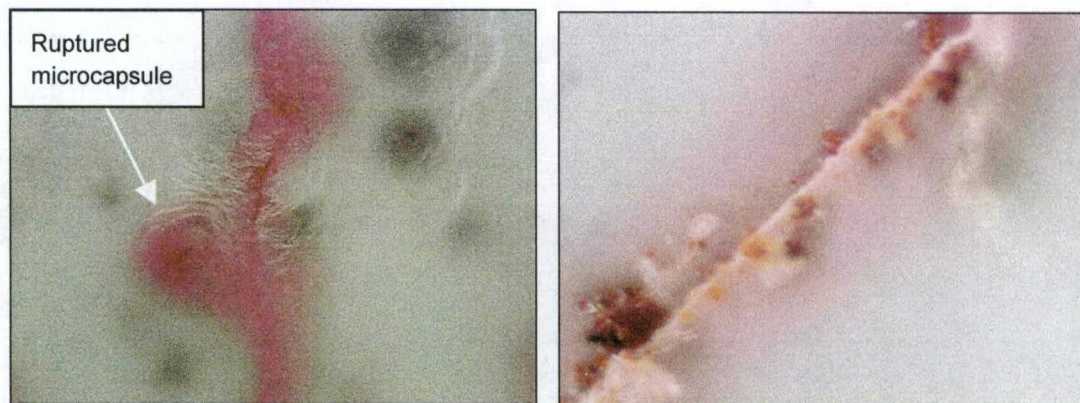

a. Flow of red dye from broken microcapsule along a crack in the painted layer
b. Release of red dye into a cut area of the coating.

Figure 3. Release of red dye from ruptured microcapsules illustrating self-healing mechanism.

Once a set of samples was painted and completely dry, some were set aside to be tested visually. The following procedure was used for this screening process. Three identical X-marks, each with exactly 1.5 in. long, were cut in each sheet with a razor blade (Figure 4). The cut penetrated completely through all of the layers. Each sample was examined carefully under the microscope to confirm visually that the microcapsules were broken. Next, the amount of dust created and the contents of the microcapsules that were visibly flowing was observed. A LeadCheck Swab was then used to try to determine the amount of lead dust getting through the cuts. These swabs are designed to turn red when they encounter lead at levels as low as 5,000 ppm (Figure 5). One X-cut was swabbed immediately after being cut; the second X-cut was tested 10 min after the cut; and the final cut was tested 3 hr after being cut. An additional 1/2-in. single cut was made in each sample to be tested in a couple of days. This time interval was used to determine how quickly the microcapsule film-formers became effective, and to see how their performance changed over time. If the microcapsule-laden coatings indicated decreased levels of lead dust compared to those of the controls, the samples were selected for the next level of testing.

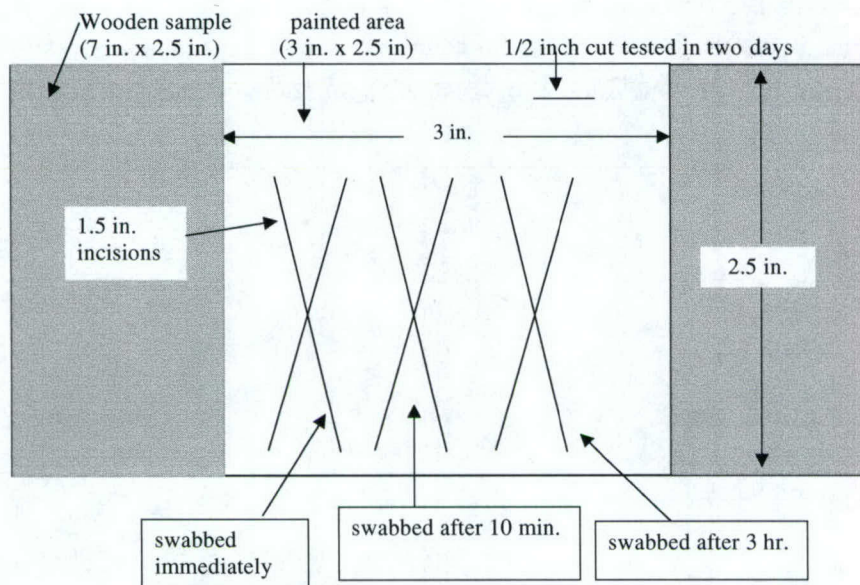


Figure 4. Cutting diagram for Lead Check® screening.

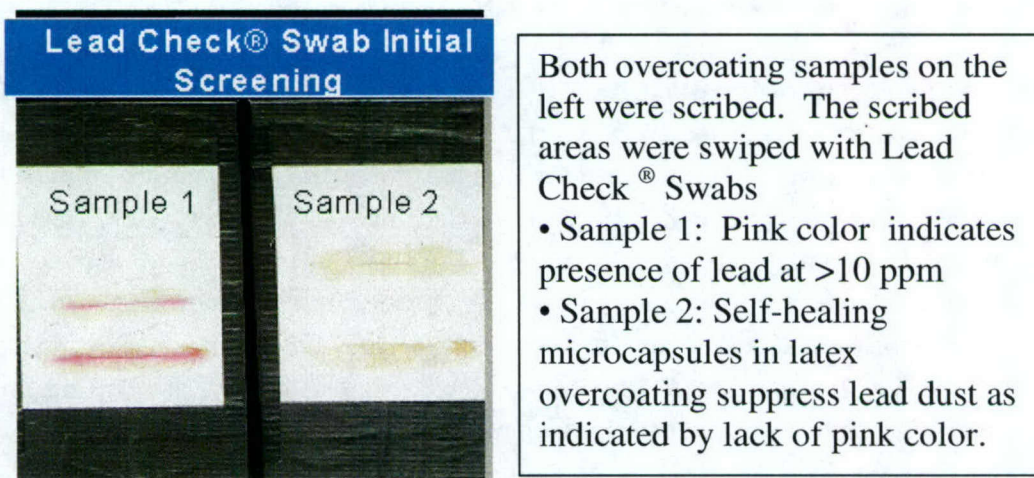


Figure 5. Comparison of Lead Check® screening on overcoatings with and without microcapsules.

To quantify the lead dust concentration levels, a wipe test was performed on each sample. Six 1.5-in. incisions were made on the sample using a razor blade. Next, three 3-in. crosshatches were made across the vertical cuts. Figure 6 demonstrates the cutting procedure. Each sample was wiped according to ASTM E 1728-95 "Standard Practice for Field Collection of Settled Dust Samples using Wipe Sampling Methods for Lead Determination by Atomic Spectrometry Techniques," using standard "ghost wipes" (i.e., prepackaged paper towelettes soaked in a wetting agent). The wipe samples were then placed into Falcon 50-m disposable test tubes and shipped to Analytical Environmental Services Inc., Atlanta, GA. Analytical Envi-

ronmental Services used the flame atomic absorption spectroscopy, Method: NIOSH 7082 for lead detection (NIOSH 1994). This method can detect lead levels to a sensitivity of 2.5 μg . Some of these samples were tested to a sensitivity of only 10 μg .

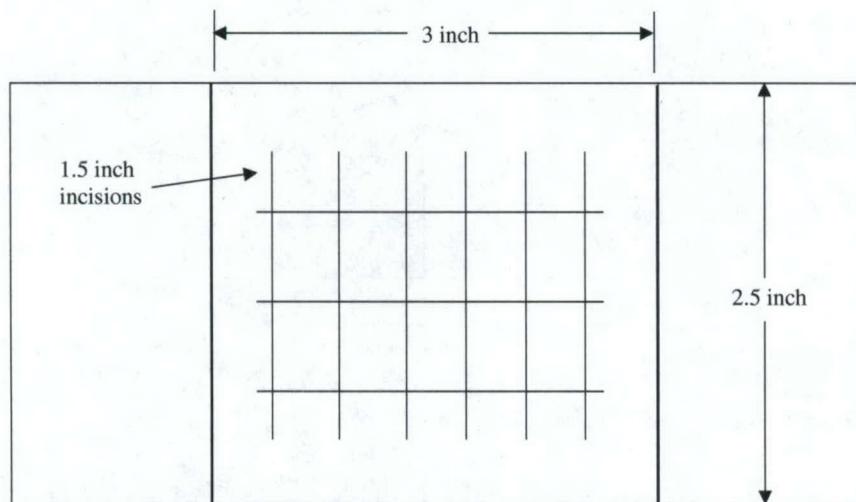


Figure 6. Cutting diagram for visual and ASTM E 1728 lead wipe testing.

Once significant improvements in lead dust suppression were obtained, field application issues were considered. Due to the larger areas of buildings and interior walls, a drawdown device is not practical. Therefore, three types of application methods were tested: spraying, rolling, and brushing. In all cases, the microcapsules were mixed using the same method as in the previous laboratory experiments, i.e., hand mixed at a 20/80 weight ratio with the paint. Applying this mixture with a spray gun was quickly ruled out, because the microcapsules broke on impact with the wood. Also, the microcapsules tended to clog up the gun. Both rolling and brushing had better results. The microcapsules seemed to be fairly well spread out in both cases. The brushing technique applied a slightly smoother surface, but also had the negative aspect of small ridges. There were a few small clumps of microcapsules when they were rolled on. The only major problem with these two techniques was that they were applying the microcapsules mixture too thinly. The layer was only about 3 mils thick, and it was not providing enough protection against the lead. To rectify this situation, two layers of microcapsules/paint mixture were applied.

Results of Laboratory Testing

Tables 1 through 7 show the results of the ASTM E1728 lead wipe tests on the overcoatings with the various types of microcapsules applied by drawdown and brush.

Table 4. ASTM E 1728 results from polybutene microcapsules applied with brush.

Code	Sample Microcapsule Type	Pb level $\mu\text{g}/\text{ft}^2$		Code	Control Microcapsule Type	Pb level $\mu\text{g}/\text{ft}^2$
Ba1	Poly 1	8.5		Ca1	Control 1a	5.5
Ba2	Poly 2	2.5		Ca2	Control 2a	49
Ba3	Poly 3	2.5		Ca3	Control 3a	25
Ba4	Poly 4	2.5		Ca4	Control 4a	199
Ba5	Poly 5	2.5		Ca5	Control 5a	42
Ba6	Poly 6	2.5		Ca6	Control 6a	93
	AVG=	3.5			AVG=	68.91667
	Stan. Dev.	5			Stan. Dev.	130.0833

Table 5. ASTM E 1728 results from Set 1 — 50/50 combination of Ca(OH) and polybutene using a drawdown device (Baker Film Applicator).

Code	Sample Microcapsule Type	Pb level $\mu\text{g}/\text{ft}^2$		Code	Control Microcapsule Type	Pb level $\mu\text{g}/\text{ft}^2$
D1	mix 1	14		C1	Control-1	25
D2	mix 2	14		C2	Control-2	39
D3	mix 3	16		C3	Control-3	40
D4	mix 4	15		C4	Control-4	19
D5	mix 5	19		C5	Control-5	24
D6	mix 6	12		C6	Control-6	43
	AVG=	15			AVG=	31.66667
	Stan. Dev.	2.366432			Stan. Dev.	10.15218

Table 6. ASTM E 1728 results from Set 2 — 50/50 combination of Ca(OH) and polybutene using a drawdown device (Baker Film Applicator).

Code	Sample Microcapsule Type	Pb level $\mu\text{g}/\text{ft}^2$		Code	Control Microcapsule Type	Pb level $\mu\text{g}/\text{ft}^2$
Db1	mix 1a	10		Cb1	Control-1	34
Db2	mix 2a	11		Cb2	Control-2	42
Db3	mix 3a	13		Cb3	Control-3	21
Db4	mix 4a	12		Cb4	Control-4	35
Db5	mix 5a	12		Cb5	Control-5	34
Db6	mix 6a	16		Cb6	Control-6	29
	AVG=	12.33333			AVG=	32.5
	Stan. Dev.	2.065591			Stan. Dev.	7.007139

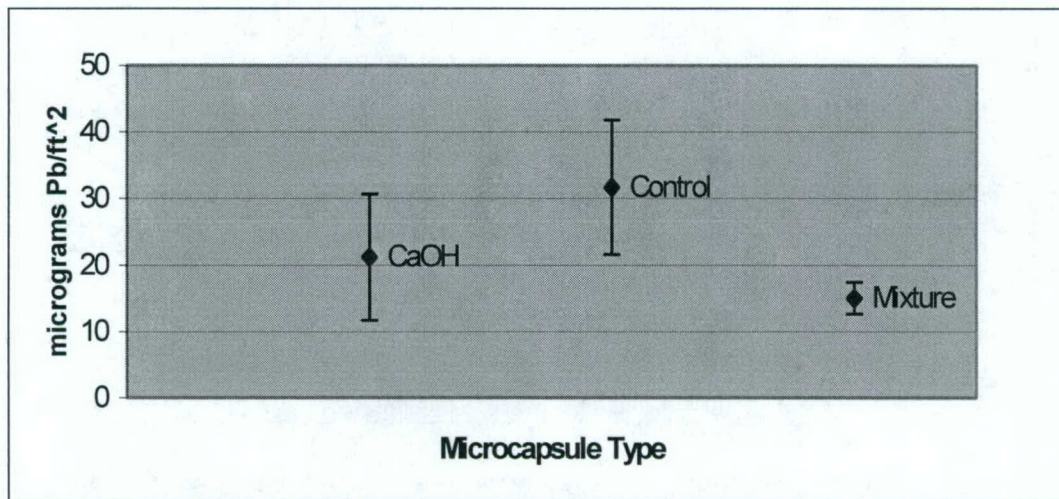


Figure 7. ASTM E1728 lead dust wipe results from Set 1: microcapsules applied with Baker Film Applicator.

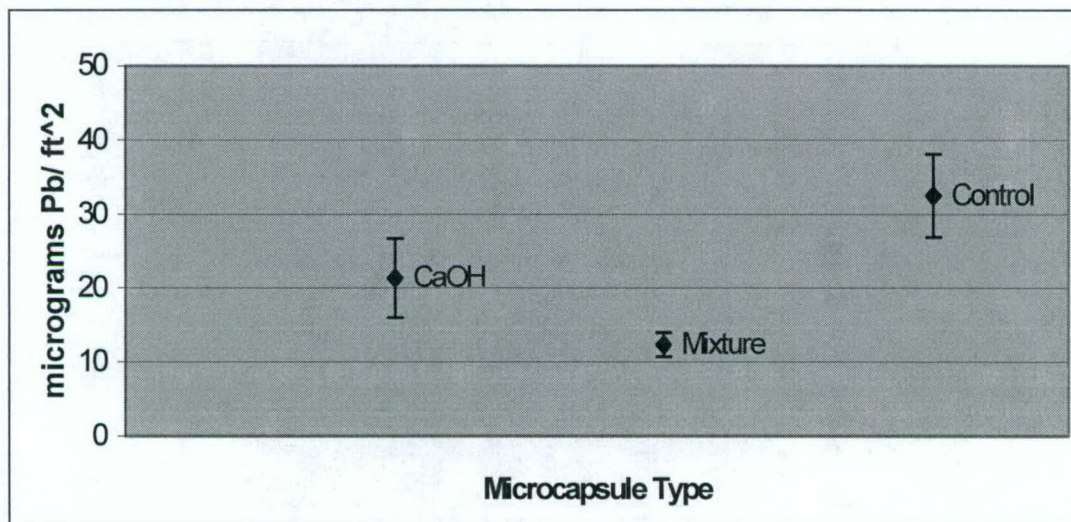


Figure 8. ASTM E1728 lead dust wipe results from Set 2: microcapsules applied with Baker Film Applicator.

As can be seen in Table 7, the mixture of microcapsules (50 percent polybutene and 50 percent CaOH) was also very effective when applied by a 2.5-in. polyester brush (95 percent lead dust suppression). The samples with the microcapsules significantly decreased the amount of lead dust on the surface compared with plain latex paint. Figures 9 and 10 are plots that show how the 50/50 mixture compares with the other microcapsules and controls when applied with a brush.

Table 7. ASTM E1728 results from 50/50 combination of Ca(OH) and polybutene applied with brush.

Code	Sample Microcapsule Type	Pb level $\mu\text{g}/\text{ft}^2$		Code	Control Microcapsule Type	Pb level $\mu\text{g}/\text{ft}^2$
Aa1	Mix 1a	2.5		Ca1	Control 1a	5.5
Aa2	Mix 2a	2.5		Ca2	Control 2a	49
Aa3	Mix 3a	2.5		Ca3	Control 3a	25
Aa4	Mix 4a	2.5		Ca4	Control 4a	199
Aa5	Mix 5a	2.5		Ca5	Control 5a	42
Aa6	Mix 6a	6		Ca6	Control 6a	93
	AVG=	3.083333			AVG=	68.91667
	Stan. Dev.	2.916667			Stan. Dev.	130.0833

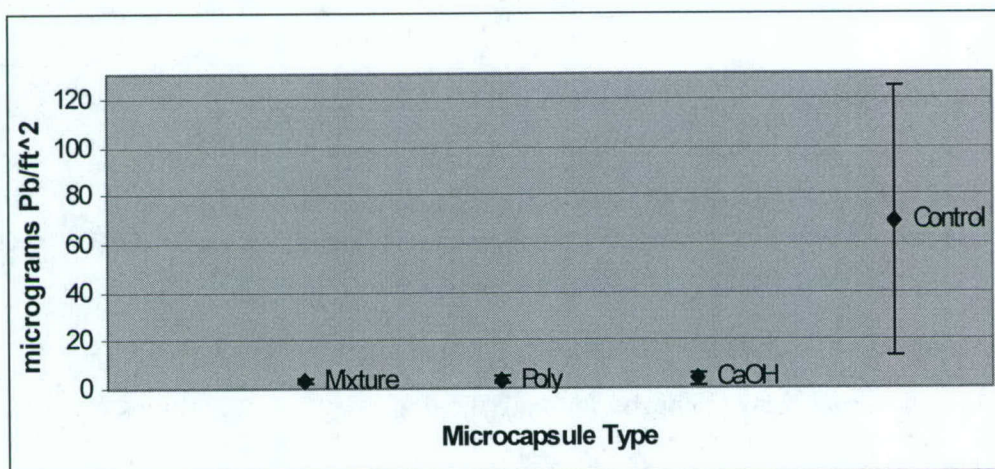


Figure 9. ASTM E1728 lead dust wipe test results with various microcapsules applied using a brush, including control coatings (without microcapsules).

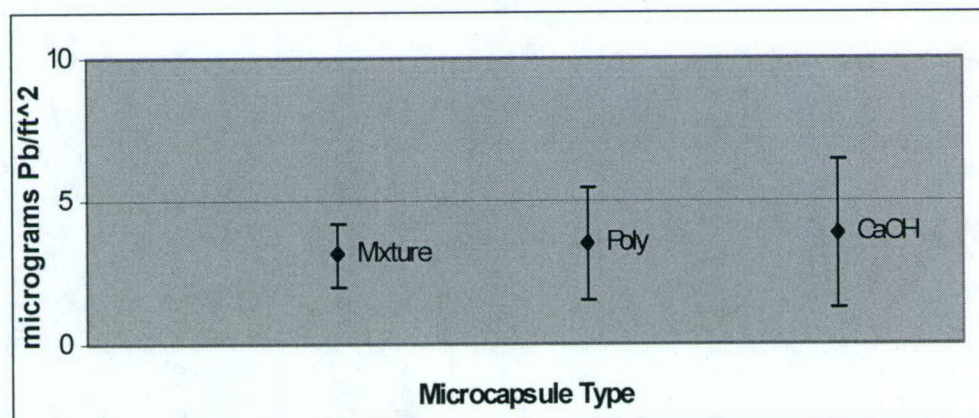


Figure 10. ASTM E1728 results with microcapsules applied using a brush with expanded scale to show comparison of various microcapsule-laden coatings.

Conclusions from Laboratory Testing

The four types of lead suppression microcapsules were thoroughly tested over a number of different time intervals. All of the types of microcapsules used provided some protection against lead dust. The most effective type of microcapsules when used alone was Ca(OH) type. These microcapsules proved to be very effective when applied both with a Baker Film Applicator and with a brush. The polybutene microcapsules were also effective in preventing lead dust. Although they did not perform as strongly as the Ca(OH) microcapsules, they were still superior to the controls. The overall best lead suppression results were realized by mixing the Ca(OH) and polybutene microcapsules in a 50/50 ratio. This mixture of microcapsules was effective at any time interval and always outperformed the controls.

Advantages and Limitations of the Technology

Overcoating with self-healing coatings is an emerging technology. Although microcapsules are not available in large commercial quantities at this time, manufacturing technology is available to produce these microcapsules.

This technology is limited to application onto existing coatings that meet overcoating criteria have been properly prepared for overcoating. Also, this technology has been tested only for overcoating LBP on wood.

3 Demonstration Design

Performance Objectives

The primary performance objectives are listed in Table 8.

Table 8. Performance objectives.

Type of Performance Objective	Primary Performance Criterion	Expected Performance (Metric)	Performance Objective Met?
Quantitative	Long-term abatement of lead hazard	< 50 $\mu\text{g}/\text{ft}^2$ Pb (wipe test)	Unknown
Quantitative	Short-term abatement of lead hazard	< 50 $\mu\text{g}/\text{ft}^2$ Pb (wipe test)	Yes
Qualitative	Application equivalent to conventional latex paint	Ease of application	Yes

Selection of Test Site/Facility

The former Fort Ord at Marina, CA, was selected for the demonstration because of the widespread presence of LBP on most buildings. Marina, CA, represents a relatively wet marine climate with high levels of incident ultraviolet (UV) radiation. The site is a challenging exterior test environment. The former Fort Ord is administered by the Fort Ord Reuse Authority.

Test Facility History/Characteristics

Interior and exterior applications were performed on Building T2862, 12th Street. The existing exterior paint was in generally good condition with only slight peeling and cracking (Figure 11). The adhesion of the existing exterior paint was tested in accordance with ASTM D 3359 *Standard Test Methods for Measuring Adhesion by Tape Test* (ASTM 2002b) (Figure 12). Adhesion was found to be acceptable for re-coating (2A to 5A). The interior application was performed on wood support columns and windows.

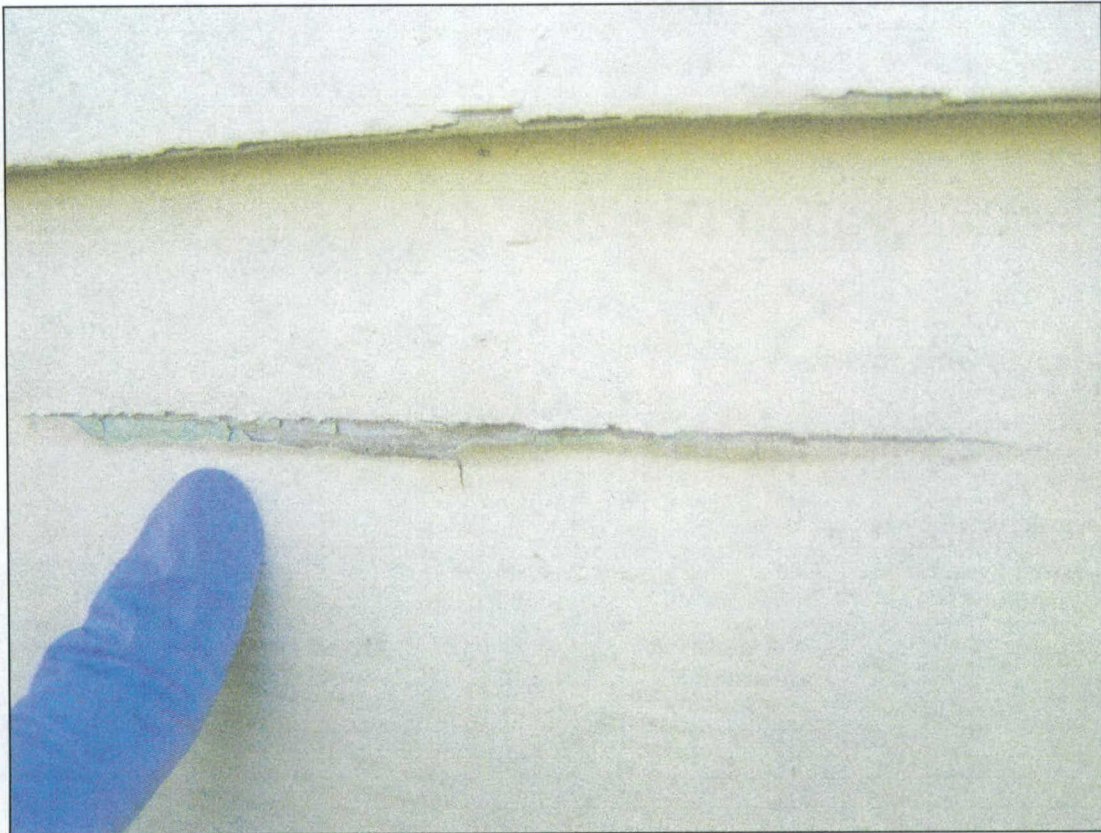


Figure 11. Preexisting condition of painted exterior wood siding.



Figure 12. Crosscut adhesion testing of old exterior paint.

LeadCheck Swabs were used to qualitatively verify the presence of lead in the existing paint (Figure 13). The swabs are a colorimetric indicator with a detection limit of 2,000 ppm lead. Confirmatory quantitative lead analyses were performed by a certified lead laboratory and are presented in Table 9.

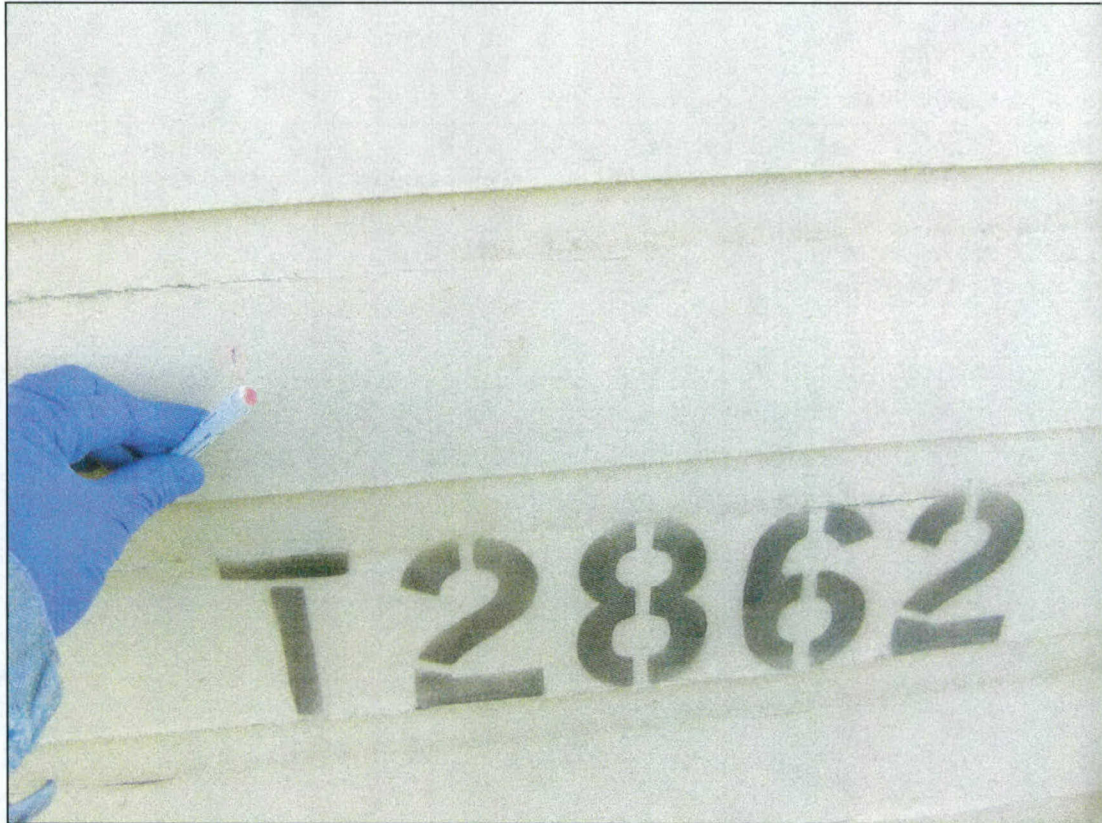


Figure 13. Verification of lead in old exterior paint.

Table 9. Lead in existing coatings.

Test Location	Result by weight (percent)	Reporting Limit (percent)
Exterior Siding	16	0.0050
Interior Columns	0.019	0.0050
Interior Windows	0.13	0.0050

Physical Setup and Operation

Manufactured microcapsules were added to commercially available interior and exterior latex coatings. Laboratory research has indicated that 30 percent by weight capsules in the dried film is sufficient to ensure self-healing properties provided the material is applied at the recommended spreading rate. A volume-solids ratio

would be preferable to a weight-solids ratio. However, additional research is needed to determine an appropriate volume-solids ratio. A 50/50 weight ratio of microcapsules containing polybutene and calcium hydroxide was used. The microcapsules were 63 to 150 microns in diameter with a urea formaldehyde shell. Table 10 shows the paint and microcapsule materials used and their quantities for the interior and exterior applications.

Table 10. Interior/exterior self-healing paints.

Paint Product	Paint Solids (lb/gallon paint)	Ca(OH) ₂ Microcapsules (lb/gallon paint)	Polybutene Microcapsules (lb/gallon paint)
Sherwin-Williams A-100® Exterior Satin Latex	4.54	0.97	0.97

The exterior test surface was wooden siding. The 100-ft² test area was cleaned to remove loose chalk using a solution of sodium sesquicarbonate and sodium metasilicate in water. The cleaner was applied and the surface was scrubbed using a non-woven abrasive pad. The surface was thoroughly rinsed with clean water and then allowed to dry (Figure 14).

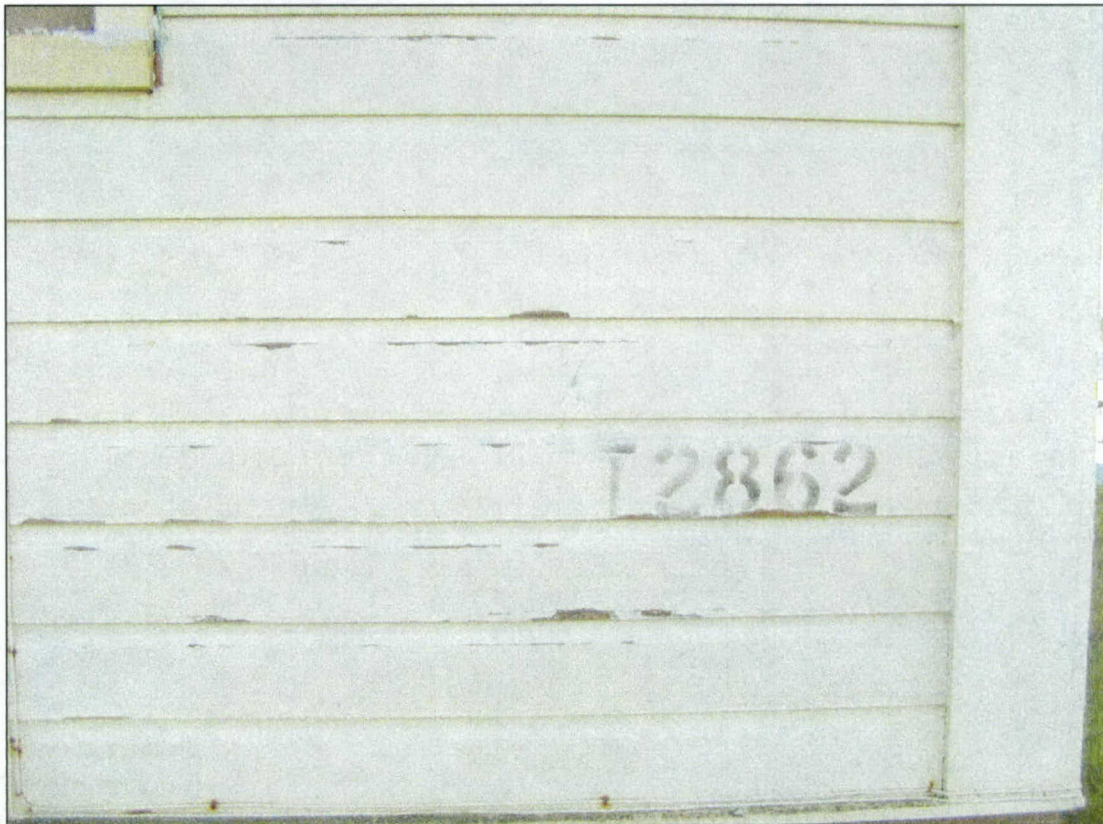


Figure 14. Cleaned exterior wood siding ready for painting.

Microcapsules (Figure 15) were weighed and gradually hand stirred into the liquid paint until uniformly dispersed. The self-healing coating was then applied by brush to 50 ft² of the exterior test area (Figure 16). The other 50 ft² was coated with the same paint (Sherwin-Williams A-100) without microcapsules. The coated areas were allowed to dry overnight and were then painted with a second coat of latex paint (A-100) without microcapsules.

The process was repeated for the interior test area except that the test area was not washed prior to coating (Figure 17).

The application of the self-healing coating was conducted 4 and 5 March 2003. Coating performance was evaluated 6 March 2003.

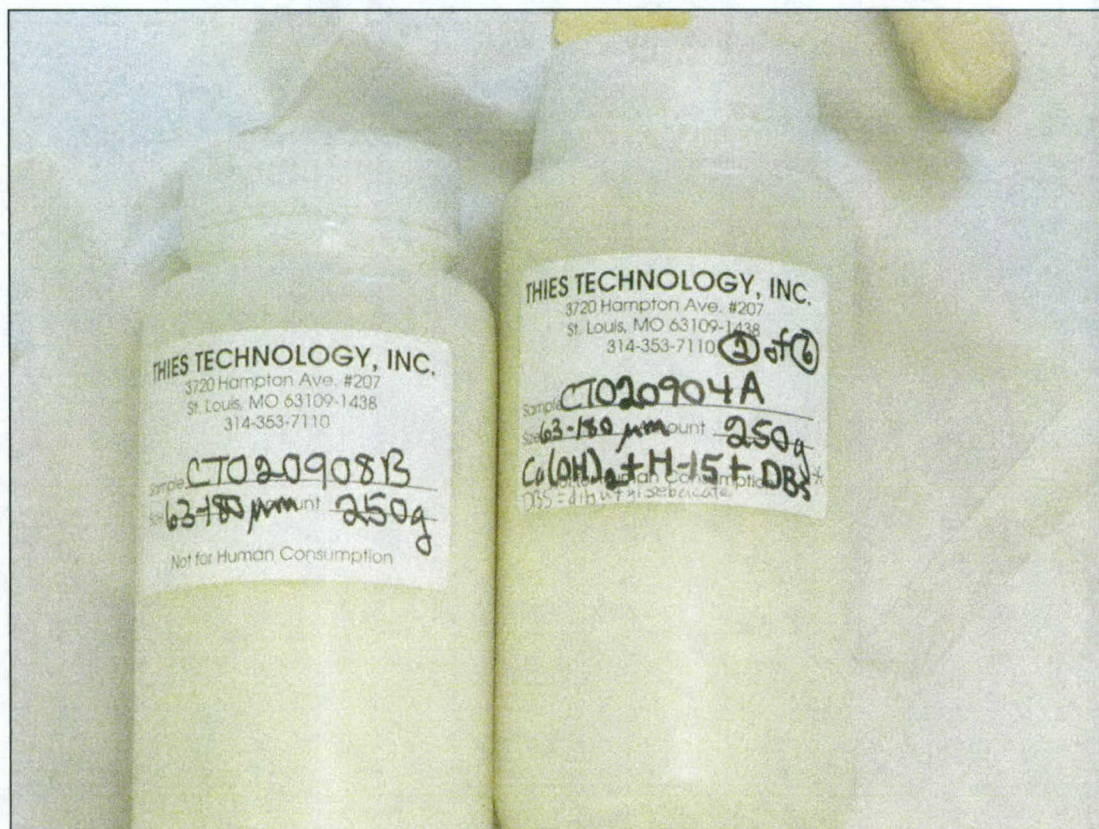


Figure 15. Polybutene and calcium hydroxide microcapsules.



Figure 16. Exterior application of self-healing coating.



Figure 17. Interior application of self-healing coatings.

The control and self-healing coating materials used for the demonstration are described in Tables 11 and 12 respectively.

Table 11. Description of acrylic latex coating.

Paint Vehicle Type	Solids (percent)	
	Weight	Volume
Latex acrylic	45	33

Table 12. Description of self-healing technology.

Paint Vehicle Type	Base Paint Solids (percent)		Polybutene Capsule Solids (percent)		CaOH Capsule Solids (percent)		Self-Healing Total Solids (percent)	
	weight	volume	weight	volume	weight	volume	weight	volume
Latex acrylic	25	26	23	18	21	21	69	67

Approximately 0.25 gal of self-healing paint was applied to 50 ft² of exterior siding. The calculated dry film thickness of self-healing coating for the exterior application was 5.2 mils. Approximately 0.16 gal of latex paint was used to coat the 50-ft² control area. The calculated dry film thickness of the latex control coating is 1.65 mils. Approximately 0.23 gal of latex paint was used to recoat the exterior control and self-healing coatings. The calculated dry film thickness of the exterior latex topcoat was 1.25 mils.

About 0.20 gal of self-healing paint was used to paint the 50-ft² interior area. The calculated dry film thickness for the interior self-healing paint application was 4.15 mils. Approximately 0.15 gal of latex paint was used to coat the 50-ft² control area. The calculated dry film thickness of the latex control coating was 1.45 mils. Approximately 0.23 gal of latex paint was used to recoat the interior control and self-healing coatings. The calculated dry film thickness of the interior latex topcoat was 1.2 mils.

The recommended spreading rate based on laboratory investigations was 8 mil wet film thickness or about 5.2 mils dry based on the solids contents of the self-healing coating used for the field application. Within experimental error the recommended application rate was achieved for both interior and exterior test areas.

Sampling/Monitoring Procedures

Test coatings were applied to surfaces known to be coated with LBP.

The self-healing and control coatings were subjected to intentional damage (scribing) followed by wipe tests to evaluate the short-term self-healing properties of the coating. Wipe tests were performed on 4- by 4-in. test areas each with eight 4-in.-long scribes through the coating to the substrate (Figure 18). Wipe test samples were taken 20 minutes after the scribes were cut. Individual wipe test kits were used for each test area.

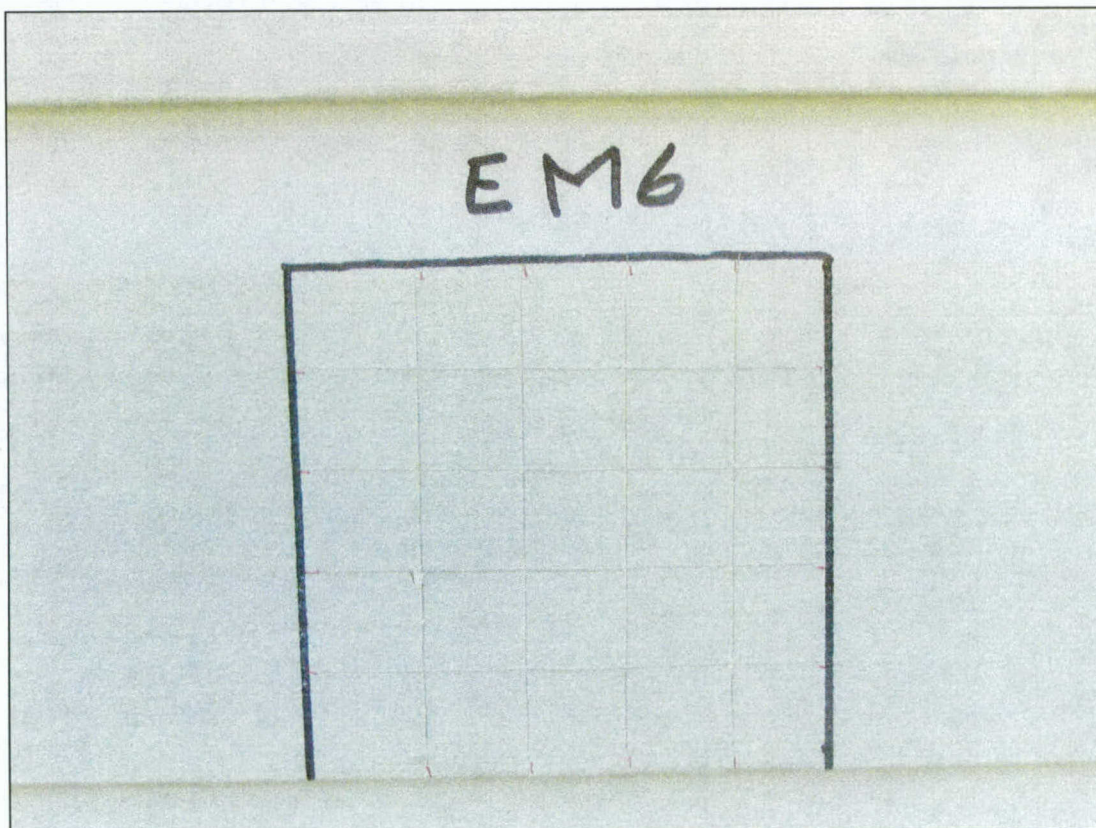


Figure 18. Scribed test area for wipe testing of self-healing coating.

Analytical Procedures

Wipe tests were performed in accordance with ASTM E1728-95 *Standard Practice for Field Collection of Settled Dust Samples using Wipe Sampling Methods for Lead Determination by Atomic Spectrometry Techniques*. Wipe and paint chip samples were prepared for total lead analysis in accordance with EPA 600/R-93/200M-P (Total Metals in Paint Chips, Sonication) (Luk et al. 1993) and analyzed in accordance with EPA 6010B (Inductively Coupled Plasma – Atomic Emission Spectrometry Method for Determination of Metals) (EPA 1986).

4 Performance Assessment

Performance Data

The short-term performance data are presented in Table 13. Table 14 summarizes the same data.

Table 13. Short-term performance data.

Sample Identification	Sample Location	Result ($\mu\text{g} / \text{ft}^2 \text{ Pb}$)
IC1	Interior column 1	ND
IC2	Interior column 1	ND
IC3	Interior column 2	126
IC4	Interior column 2	56
IC5	Interior column 3	ND
IC6	Interior column 3	ND
IM1	Interior column 4	ND
IM2	Interior column 4	ND
IM3	Interior column 5	ND
IM4	Interior column 5	ND
IM5	Interior column 6	ND
IM6	Interior column 6	ND
IM7	Interior window	ND
IM8	Interior window	ND
EC1	Exterior siding west corner	ND
EC2	Exterior siding west corner	ND
EC3	Exterior siding west corner	ND
EC4	Exterior siding west	1,980
EC5	Exterior siding west	2,340
EC6	Exterior siding west	3,150
EM1	Exterior siding east corner	ND
EM2	Exterior siding east corner	117
EM3	Exterior siding east corner	441
EM4	Exterior siding east	ND
EM5	Exterior siding east	153
EM6	Exterior siding east	ND

Notes: C = control samples

M = samples of self-healing coatings containing microcapsules

ND = non-detectable at the reporting limit of $45 \mu\text{g} / \text{ft}^2 \text{ Pb}$

Performance Criteria

The primary performance criteria are listed in Table 14.

Table 14. Performance criteria.

Type of Performance Criterion	Primary Performance Criterion	Performance Criterion	Actual Performance
Quantitative	Abatement of lead hazard for 10 years	< 50 $\mu\text{g}/\text{ft}^2$ Pb (wipe test)	Unknown
	Abatement of lead hazard on intentionally damaged paint	< 50 $\mu\text{g}/\text{ft}^2$ Pb (wipe test)	Average 45 $\mu\text{g}/\text{ft}^2$ Pb interior* (Interior control 60 $\mu\text{g}/\text{ft}^2$ Pb) Average 140 $\mu\text{g}/\text{ft}^2$ Pb exterior (Exterior control 1,300 $\mu\text{g}/\text{ft}^2$ Pb)
Qualitative	Application equivalent to latex paints	Ease of application by brush – no runs, sags, curtains, or other application defects at specified application rate.	No runs, sags, curtains, or other application defects at specified application rate.

*Detection limit 45 $\mu\text{g}/\text{ft}^2$ Pb – no lead was detected in any of the interior self-healing samples.

Data Assessment

Mixing was readily accomplished by gradually adding the microcapsules to the paint while stirring. Mixing time was about 5 minutes. The consistency of the self-healing paint was very thick, but the material could still be poured.

There were no application-related defects, and appearance was acceptable when the paint was applied by brush. However, there was increased drag on the brush, and subsequent greater degree of effort was needed to apply the self-healing coating compared with the same paint without microcapsules. Application could be improved by using a purpose formulated latex base with lower solids content.

All of the interior post-scribe wipe tests on self-healing coatings returned lead concentrations below the performance criterion of 50 $\mu\text{g}/\text{ft}^2$. However, two of six controls had detectable lead levels.

Three of the six exterior wipe tests in the control area had detectable lead levels, all of which exceeded the performance criterion of 50 $\mu\text{g}/\text{ft}^2$. Three of the six exterior wipe tests on the self-healing coating also had detectable lead levels, all of which were above the performance criterion of 50 $\mu\text{g}/\text{ft}^2$.

The average wipe test lead level for interior surfaces coated with self-healing coating was $45 \mu\text{g}/\text{ft}^2$ lead, or the same as the method detection limit. Tests on interior control surfaces were only slightly higher with an average of $60 \mu\text{g}/\text{ft}^2$ lead. The tests on interior surfaces show a 25 percent improvement in coating performance.

The average wipe test lead level for exterior surfaces coated with self-healing coating was $140 \mu\text{g}/\text{ft}^2$ lead. Tests on exterior control surfaces were significantly higher with an average of $1,300 \mu\text{g}/\text{ft}^2$ lead. The tests on exterior surfaces demonstrate the short-term efficacy of the self-healing coating, i.e., an 89 percent improvement in coating performance.

Technology Comparison

Self-healing coatings should be durable on interior surfaces for at least 20 years. However, exterior applications are not as forgiving. Coatings last longer in exterior environments if the substrate is dimensionally stable. Such is the case with concrete and stucco building surfaces. Wood, on the other hand, absorbs water and goes through fairly significant dimensional changes. These changes coupled with the degradation of the coating itself usually mean that coatings on exterior wood last less than 10 years. It is likely that self-healing coatings will significantly extend the maintenance cycle on exterior wood surfaces beyond the generally accepted maximum life of plain latex paint overcoatings of 7 to 10 years.

Another inherent feature of thick film elastomeric latex coatings is their relatively low water permeability compared to conventional architectural coatings. This property can be beneficial because elastomeric coating will reduce water migration to the substrate, which in turn enhances long-term coating performance. However, this same feature can be problematic. Lower permeability also means that water can build up underneath the coating. This typically results in premature failure of the coating. The phenomenon occurs when water enters the building envelope because of poor construction such as unsealed wall penetrations, unprotected roof parapets, or poorly caulked windows. Once inside of the wall, water will attempt to pass through the coating when the ambient temperature is cooler than the temperature of the wall. Elastomeric coatings pass water vapor at a lower rate. When the driving force exceeds the ability of the coating to pass water vapor, liquid water will form under the coating, creating blisters. Irreversible film deformation may occur as well as substrate degradation. Ultimately the coating loses adhesion and must be repaired or replaced.

5 Cost Performance Assessment

Cost of Self-Healing Overcoatings

The cost analysis for applying self-healing coatings to 1,000 sq ft of LBP on a wood surface is shown in Table 15. The cost analysis for applying latex paint without self-healing microcapsules is shown in Table 16.

Table 15. Costs for applying self-healing coatings (per 1,000 sq ft.)

Activity	Time/Cost	Activity	Time/Cost	Activity	Time/Cost
Surface Preparation		Mix and Apply Self-Healing Coating		Mix and Apply Topcoat	
Rate (painter) \$/hr	40	Rate (painter) \$/hr	40	Rate (painter) \$/hr	40
Hours	2	Hours	15	Hours	15
Labor subtotal	\$80		\$600		\$600
Consumable Materials		5 gal. latex paint @ \$20/gal	\$100	2.5 gal. latex paint @ \$20 /gal	\$50
		9.7 lb microcapsules @ \$16/lb	\$155		
Materials subtotal			\$255		\$50
Overhead on direct labor @70%	\$56		\$420		\$420
Category total	\$136		\$1,275		\$1,070
General & Admin. Overhead @30%	\$41		\$383		\$321
Subtotal					\$3,225
Profit @15%					\$484
TOTAL					\$3,709
Unit Area Cost (UAC)					\$3.71

Table 16. Costs for applying latex paint (per 1,000 sq ft.)

Activity	Time/Cost	Activity	Time/Cost	Activity	Time/Cost
Surface Preparation		Mix and Apply Self-Healing Coating		Mix and Apply Topcoat	
Rate (painter) \$/hr	40	Rate (painter) \$/hr	40	Rate (painter) \$/hr	40
Hours	2	Hours	15	Hours	15
Labor subtotal	\$80		\$600		\$600
Consumable Materials		5 gal. latex paint @ \$20/gal	\$100	2.5 gal. latex paint @ \$20 /gal	\$50
		9.7 lb microcapsules @ \$16/lb	\$0		
Materials subtotal			\$100		\$50
Overhead on direct labor @70%	\$56		\$420		\$420
Category total	\$136		\$1,120		\$1,070
General & Admin. Overhead @30%	\$41		\$336		\$321
Subtotal					\$3,024
Profit @15%					\$454
TOTAL					\$3,477
Unit Area Cost (UAC)			-		\$3.48

Cost Analysis

Material costs for self-healing coatings are based on a projected mean cost for microcapsules of \$16/lb and a projected latex paint price of \$20/gal. Based on the results of this demonstration, it is projected that 0.97 lb of both polybutene microcapsules and 0.97 lb of CaOH microcapsules should be used per gallon of paint. To cover 1,000 sq ft of wood surface, 5 gal of paint must be mixed with 9.7 lb of microcapsules, and 2.5 gal of latex paint must be used for topcoat.

Cost Comparison

The unit area cost of self-healing coatings is \$3.71/sq ft, and the unit area cost of plain latex coatings is \$3.48/sq ft. The only difference between the use of latex paint overcoatings and self-healing overcoatings is the projected cost of the microcapsules at \$0.23 per sq ft. The addition of the microcapsules results in an increase of 6.2 percent to the cost of overcoating. Note that in the laboratory testing, the self-healing overcoatings showed a 95 percent improvement in coating performance over the controls, while in the field demonstration, they resulted in 25 to 89 percent improvement in coating performance, i.e., lead dust reduction. Thus, the life cycle extension of the overcoatings is projected to range from 25 to 95 percent (with a mean value of 60 percent) by the incorporation of the self-healing microcapsules.

The generally accepted maximum life of plain latex paint overcoatings is 7 to 10 years on exterior surfaces due to degradation by the ultraviolet light component of sunlight and only 4 years on interior surfaces due to wear and tear from the hands of children. Based on the reduction in lead dust, self-healing coatings have the potential to provide a projected increase in the life of the overcoating by 4.2 to 6 years for exterior surfaces and by 2.4 years for interior surfaces. For plain latex overcoatings, the unit area costs per year of coating life range from \$0.34/sq ft/year to \$0.50/sq ft/year for exterior coatings and \$0.87/sq ft/year for interior coatings. For self-healing overcoatings, the potential unit area costs per year range from \$0.23/sq ft/year to \$0.33/sq ft/year for exterior coatings, and \$0.58/sq ft/year for interior coatings. In either case, the cost benefit from using self-healing coatings for both exterior and interior surfaces, is projected to be 33 percent over the 11.2 to 16 years for exterior coatings, or over 6.4 years for interior coatings in child-accessible areas, compared with plain latex overcoatings. Self-healing coatings should be used only for overcoating LBP on exterior surfaces or interior surfaces in high wear-and-tear areas.

6 Summary

Implementation Costs

Self-healing coatings are an attractive alternative to latex paint overcoatings based on estimated costs. Based on the results of this technology demonstration, the unit area cost of self-healing coatings was shown to be is \$3.71/sq ft, and the unit area cost of plain latex coatings was \$3.48/sq ft. However, the material costs for self-healing coatings are projected, and actual costs could be significantly higher or lower depending on the size of the market.

Although the addition of the microcapsules results in an increase of 6.2 percent to the cost of overcoating, the self-healing overcoatings showed a 95 percent reduction in lead dust over the controls in the laboratory. In the field demonstration, they resulted in 25 to 89 percent reduction in lead dust performance, with a mean lead reduction of 60 percent. On the basis of lead dust reduction, the service life of the coating is extended by 60 percent. Since the generally accepted maximum life of plain latex paint overcoatings is 7 to 10 years on exterior surfaces and 4 years on interior surfaces due to wear and tear at the hands of children, the coating lives are extended by 4.2 to 6 years for exterior coatings and 2.4 years for interior coatings. For plain latex overcoatings, the unit area costs per year of coating life range from \$0.34/sq ft/year to \$0.50/sq ft/year for exterior coatings and \$0.87/sq ft/year for interior coatings. For self-healing overcoatings, the potential unit area costs per year range from \$0.23/sq ft/year to \$0.33/sq ft/year for exterior coatings, and \$0.58/sq ft/year for interior coatings. When used on both exterior and interior surfaces, the self-healing overcoatings are projected to result in a life cycle cost savings of 33 percent over the 11.2 to 16 years for exterior coatings, or over 6.4 years for interior coatings, compared with plain latex overcoatings.

Performance Observations

For the interior and exterior tests, there were no application-related defects, and appearance was acceptable when the paint was applied by brush. However, there was a significant amount of drag on the brush, and subsequently a greater degree of

effort was needed to apply the self-healing coating compared with the same paint without microcapsules.

Three of the six exterior wipe tests in the control area had detectable lead levels, all of which exceeded the performance criterion of $50 \mu\text{g}/\text{ft}^2$. Three of the six exterior wipe tests on the self-healing coating also had detectable lead levels, all above the performance criterion of $50 \mu\text{g}/\text{ft}^2$.

The average wipe test lead level for exterior surfaces coated with self-healing coating was $140 \mu\text{g}/\text{ft}^2$ lead. Tests on exterior control surfaces were significantly higher with an average of $1,300 \mu\text{g}/\text{ft}^2$ lead. The tests on exterior surfaces demonstrates the short-term efficacy of the self-healing coating, showing an 89 percent reduction in lead dust, compared to the plain latex coating.

All of the interior post-scribe wipe tests on self-healing coatings returned lead concentrations below the performance criterion of $50 \mu\text{g}/\text{ft}^2$. However, two of six controls had detectable lead levels while none of the wipe tests on the self-healing coating had detectable lead. Lead wipe test results on interior control surfaces (plain latex coatings) averaged $60 \mu\text{g}/\text{ft}^2$ lead. The average wipe test lead level for interior surfaces coated with self-healing coating was $45 \mu\text{g}/\text{ft}^2$ lead, or the same as the method detection limit, which meets the performance criteria of $<50 \mu\text{g}/\text{ft}^2$ lead. The lead wipe tests on interior surfaces showed a 25 percent reduction in lead dust over the plain latex coating. Self-healing coatings should be used only for overcoating LBP on exterior surfaces or interior surfaces in high wear-and-tear areas.

References

- Army Regulation [AR] 420-70, *Buildings and Structures*, (Headquarters, Department of the Army [HQDA], Washington, DC, 11 November 1997).
- ASTM E1728, *Standard Practice for Collection of Settled Dust Samples Using Wipe Sampling Methods for Subsequent Lead Determination* (ASTM International, West Conshohocken, PA, 2002a).
- ASTM D3359, *Standard Testing Method for Measuring Adhesion by Tape* (ASTM International, West Conshohocken, PA, 2002b).
- ASTM E2252, *Standard Practice for the Selection of Lead Hazard Reduction Methods for Identified Risks in Residential Housing or Child Occupied Facilities* (ASTM International, West Conshohocken, PA, 2003).
- Bartlett, D. J., "High-Build Latex Coatings for Protecting and Decorating Concrete and Related Building Surfaces," *Journal of Protective Coating and Linings*, September 2001.
- Davis-Bacon Wage Determinations (on the Government Printing Office web site, GPO Access) <http://www.access.gpo.gov/davisbacon/>
- Defense Information Systems Agency, Acquisition Deskbook – Independent Government Cost Estimates, <http://disa.dtic.mil/D4/igce98.html>
- Luk, K. K., P. M. Grohse, L. L. Hodson, D. A. Binstock, and C. C. VanHise, *Standard Operating Procedure for the Field Analysis of Lead in Paint, Bulk Dust, and Soil by Ultrasonic, Acid Digestion and Colorimetric Measurement*, DPO 600/R-93/200 (EPA, Research Triangle Institute, Research Triangle Park, NC, 1993).
- National Institute for Occupational Safety and Health, "Lead by Flame AAS: Method 7082," Issue 2, 4th ed., 15 August 1994.
- SSPC: The Society for Protective Coatings, "Paint Application," *Steel Structures Painting Manual*, vol 1, Chapter 5.1, Paint Application, 3rd ed. (1993).
- Unified Facilities Guide Specifications, Section 13281A, *Lead Hazard Control Activities*, April 2000.
- U.S. Army Center for Public Works, *Installation Lead Hazard Management*, Public Works Technical Bulletin 420-70-2, Alexandria, VA, 20 February 1997.
- U.S. Environmental Protection Agency, *Inductively Coupled Plasma – Atomic Emission Spectrometry*, Test Method 6010B (Office of Solid Waste and Emergency Response, 1986).

U. S. Department of Housing and Urban Development, *Guidelines for the Evaluation and Control of Lead-Based Paint Hazards in Housing*, Washington, DC (June 1995).

Points of Contact

Name	Organization	Phone/Fax/E-mail	Role in Project
Dr. Ashok Kumar	ERDC/CERL P. O. Box 9005 Champaign, IL 61826-9005	Tel: 217-373-7235 Fax: 217-373-7222 E-mail: a-kumar@cecer.army.mil	Principal Investigator
Dr. L. D. Stephenson	ERDC/CERL P. O. Box 9005 Champaign, IL 61826-9005	Tel: 217-373-6758 Fax: 217-373-7222 E-mail: l-stephenson@cecer.army.mil	Contracting Officer's Technical Representative
Tim Race	Corrosion Control Consultants and Labs 135 Addison Ave., Suite 108 Elmhurst, IL 60126	Tel: 630-834-3811 Fax: 630-834-3812 E-mail: trace@ccclabs.com	Principal Consultant
Stan Cook	Fort Ord Reuse Authority 100 12 th Street, Building 2880 Marina, CA 93933	Tel: 831-883-3672 E-mail: stan@fora.org	Facility Contact

Acronyms

AR	Army Regulation
ASTM	American Society for Testing and Materials
CFR	Code of Federal Regulations
DISA	Defense Information Systems Agency
EPA	U.S. Environmental Protection Agency
ICP-AES	Inductively Coupled Plasma – Atomic Emission Spectroscopy
LBP	lead-based paint
POM	Presidio of Monterey
PPM	parts per million
TCLP	Toxic Characteristic Leaching Procedure
UAC	unit area cost
UFGS	Unified Facilities Guide Specification
UV	ultraviolet

REPORT DOCUMENTATION PAGEForm Approved
OMB No. 0704-0188

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing this collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden to Department of Defense, Washington Headquarters Services, Directorate for Information Operations and Reports (0704-0188), 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to any penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number. PLEASE DO NOT RETURN YOUR FORM TO THE ABOVE ADDRESS.

1. REPORT DATE (DD-MM-YYYY) 7-2003		2. REPORT TYPE Final		3. DATES COVERED (From - To)	
4. TITLE AND SUBTITLE Technology Demonstration of Self-Healing Coatings for In-Place Management of Lead-Based Paint Hazards				5a. CONTRACT NUMBER	
				5b. GRANT NUMBER	
				5c. PROGRAM ELEMENT NUMBER 063728A	
				5d. PROJECT NUMBER	
6. AUTHOR(S) L. D. Stephenson and Ashok Kumar				5e. TASK NUMBER	
				5f. WORK UNIT NUMBER CF-M B101	
				8. PERFORMING ORGANIZATION REPORT NUMBER ERDC/CERL TR-03-29	
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) U.S. Army Engineer Research and Development Center (ERDC) Construction Engineering Research Laboratory (CERL) PO Box 9005 Champaign, IL 61826-9005				10. SPONSOR/MONITOR'S ACRONYM(S) DAIM-FDF	
9. SPONSORING / MONITORING AGENCY NAME(S) AND ADDRESS(ES) Headquarters, Department of the Army Attn: DAIM-FDF 600 Army Pentagon Washington, DC 2031-0600				11. SPONSOR/MONITOR'S REPORT NUMBER(S)	
12. DISTRIBUTION / AVAILABILITY STATEMENT Approved for public release; distribution is unlimited.					
13. SUPPLEMENTARY NOTES Copies are available from the National Technical Information Service, 5285 Port Royal Road, Springfield, VA 22161.					
14. ABSTRACT <p>Microcapsules on the order of 50-150 microns in size have been developed that can contain and release a small quantity of self-repairing compound in liquid form when they are broken. These microcapsules are mixed in commercially available latex paints and used to overcoat lead-based paint. Should the overcoating become damaged, the microcapsules break open and release liquid coating repair and lead dust suppression compounds. In effect, the coating becomes self-healing when damaged. The self-healing coatings were tested in the laboratory and demonstrated on a wooden building at the former Fort Ord, CA. In both cases, when the self-healing coatings were applied to lead based paint, cut, and wipe tested, significant reductions in lead dust were realized compared with the results of applying the same test procedure to plain latex paint overcoatings.</p>					
15. SUBJECT TERMS lead-based paint (LBP), hazardous waste, coatings, paint, self-healing coatings, wooden buildings, Fort Ord, CA					
16. SECURITY CLASSIFICATION OF:			17. LIMITATION OF ABSTRACT SAR	18. NUMBER OF PAGES 47	19a. NAME OF RESPONSIBLE PERSON
a. REPORT Unclassified	b. ABSTRACT Unclassified	c. THIS PAGE Unclassified			19b. TELEPHONE NUMBER (include area code) 217/352-6511